

## LinkTouch ready transmitters: OLD & NEW mode

The "Old" mode is only used when your PLP-REM-300 is not "LinkTouch ready"

The "New" mode is only used when your PLP-REM-300 is "LinkTouch ready"

The mode can only be switched on transmitters which have a sticker "LinkTouch ready" at the backside

### Instructions to change the mode

- 1) Press and hold the "DIM" button  
---> the LED turns ON for about 2 seconds  
turns OFF for about 4 seconds  
starts to BLINK
- 2) Release the "DIM" button
- 3) Press "UP" to select the "New" mode or
- 4) Press "DOWN" to select the "Old" mode

The remote is now set to the selected mode and ready for use

